

25:75 1x2 1064nm Polarization Maintaining Fiber Coupler FC/APC



● Product Description

These 2x2 Polarization Maintaining (PM) Fiber Couplers are designed for use from 460-2200 nm and are available with coupling ratios of 50:50, 75:25, 90:10, or 99:1. The 2x2 couplers are bidirectional and can be used to split or mix signals (see the 2x2 Coupling Examples tab). Polarization-maintaining couplers are made using Panda-type polarization-maintaining fibers, so they maintain a high polarization extinction ratio (PER) when light is launched along the slow axis of the fiber. As shown in the figure to the right, stress rods are parallel to the fiber core and apply stress to induce birefringence in the fiber core, thereby achieving polarization-maintaining operation. Typical applications of polarization-maintaining couplers include optical sensors, optical amplifiers, and fiber gyroscopes.

● Part Number

NIR-PMFBC-W1064-S12-CR2575-1-9-PA

● Product features


980/1064/1550/1310nm Polarization Maintaining Fiber Coupler 、 Split ratio 50:50, 75:25, 90:10 or 99:1 、 Bidirectional coupling (either end can be used as input) 、 2.0 mm narrow key FC/PC or FC/APC connectors

● Application area

Polarization- Maintaining Fiber Amplifier 、 Fiber optic gyroscope 、 Optical sensor

General Parameters

Polarized light aligned
to the slow axis

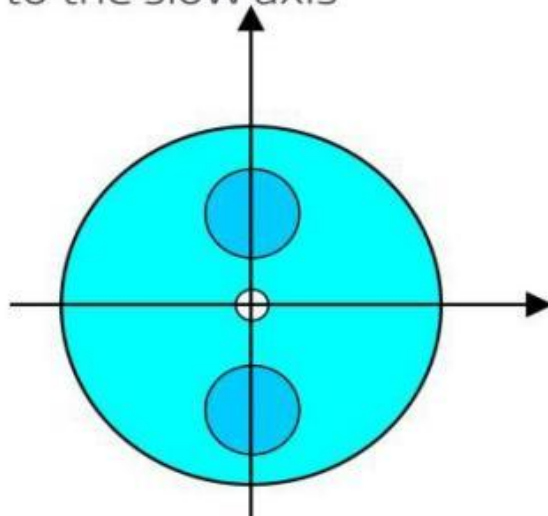

Polarized light aligned
to the fast axis

The default alignment mode of Idealphotonics' optical polarization-maintaining components is slow-axis alignment.

Idealphotonics' polarization-maintaining couplers have high extinction ratios and operate over a wide temperature range of -40 °C to 85 °C. Note that PER varies with temperature; see the Temperature Cycling Test Section in the Polarization Extinction Ratio Measurement tab for details. They have a max. power of 1 W with connectors or bare fiber and 5 W when spliced (see the Damage Threshold tab for details).

These couplers have been extensively tested and PER verified; see the Polarization Extinction Ratio Measurement tab for details of the testing process. Standard couplers feature 2.0 mm narrow key FC/PC or FC/APC connectors as summarized in the table below. When using the coupler as a beam combiner, it is necessary to terminate the fiber to the unused output, as some of the light will propagate through this branch. Fiber pigtails have $\varnothing 900 \mu\text{m}$ Hytrel® jackets and are 0.8 m long. Custom coupler configurations with other wavelengths, fiber types, coupling ratios, alignment axes, or port configurations are also available. Please contact us for inquiries: info@idealphotonics.com.

General parameters

| Structure | Unit | 1×2/2×2 | | | |
|-----------------------|-------|---------|--|--------|---------------|
| Type | | | Polarization-Maintaining Fiber Optic Coupler (P MFBC) | | |
| Working wavelength | | nm | 980 or 1064 or 1310 or 1550 | | |
| Working bandwidth | | nm | ±15 | | |
| Max. Insertion Loss | 50/50 | % | 3.60/3.60 | | |
| | 30/70 | % | 5.75/2.10 | | |
| | 10/90 | % | 11.60/1.00 | | |
| | 5/95 | % | 14.80/0.80 | | |
| | 2/98 | % | 18.50/0.45 | | |
| | 1/99 | % | 22.00/0.40 | | |
| Extinction ratio | | dB | CR>5% | ≥20.00 | |
| | | | 5% ≥ CR > 1% | ≥18.00 | |
| Return loss | | dB | ≥50.00 | | |
| Directionality | | dB | ≥55.00 | | |
| Operating temperature | | Deg. | -5-75 | | |
| Storage temperature | | Deg. | -40-85 | | |
| Fiber length | | m | 1.00±0.10 | | |
| Fiber Type | | | Panda PM Fiber | | |
| Fiber diameter | | um | 250 | 900 | 900/2000/3000 |
| Package size | | mm | 2.4x25,3×35,3×54 | 3×54 | 90×16×10 |

Note:

1. All test results do not include connectors. Adding connectors will increase the loss by 0.3dB.
2. We can accept customization for better parameters or other requirements.
3. For custom wavelengths, coupling ratios and connector options, please contact us: info@idealphotonics.com

Single point data test 1X2, 50:50, 1550nm polarization-maintaining fiber coupler (broadband SLD center wave 1550nm, spectrum width: 30nm, 2.5mw polarization-maintaining SLD laser test as an example)



1550nm PM SLD Laser diode




Slow axis alignment

NIR-PMFBC - W1550-S1-CR5050-1-9-PA-35T

black port@1550nm

NIR-PMFBC - W1550-S1-CR5050-1-9-PA-35T

white port@1550nm

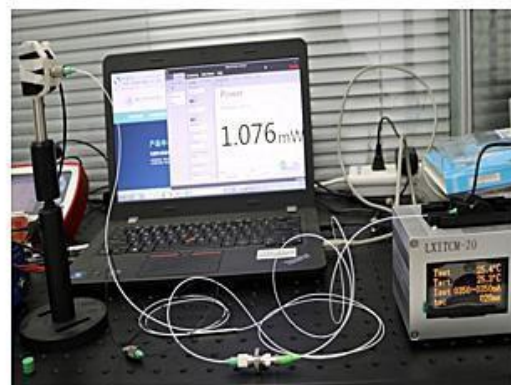

Ordering Info:

NIR-PMFBC - W□□□□-So-CR▽-☆-△-XX-□□

W□□□□: Wavelength

1064:1064nm

1310:1310nm

1392:1392nm

1512:1512nm

1532:1532nm

1550:1550nm

1650:1650nm

1742:1742nm

SO : Port Structure

12:1x2

22: 2x2

CR▽: 0199: 1:99

1090: 10:90

2575:25:75

5050: 50:50

☆: Pigtail Length 05:0.5m

1:1m

10:10m

△: Loose Tube

B: Bare Fiber

9: 900um Loose Tube

20: 2mm Loose Tube

30: 3mm Loose Tube

XX: Fiber and Connector Type

PA=PM Fiber+ FC/APC

PP=PM Fiber+ FC/PC

PN=None No connector